


## How to Enter BISS, CCW and DCW Key's

Download the Latest Plugin from [www.lucksat.biz](http://www.lucksat.biz) and start COCONUT from Menu=> Plugin => COCONUT press green key and select yes RED key and YES

Now Go to the channel you want to open by CCW or BISS and press INFO key 2 times you will see Info bar with EPG Information now Press **RED** button

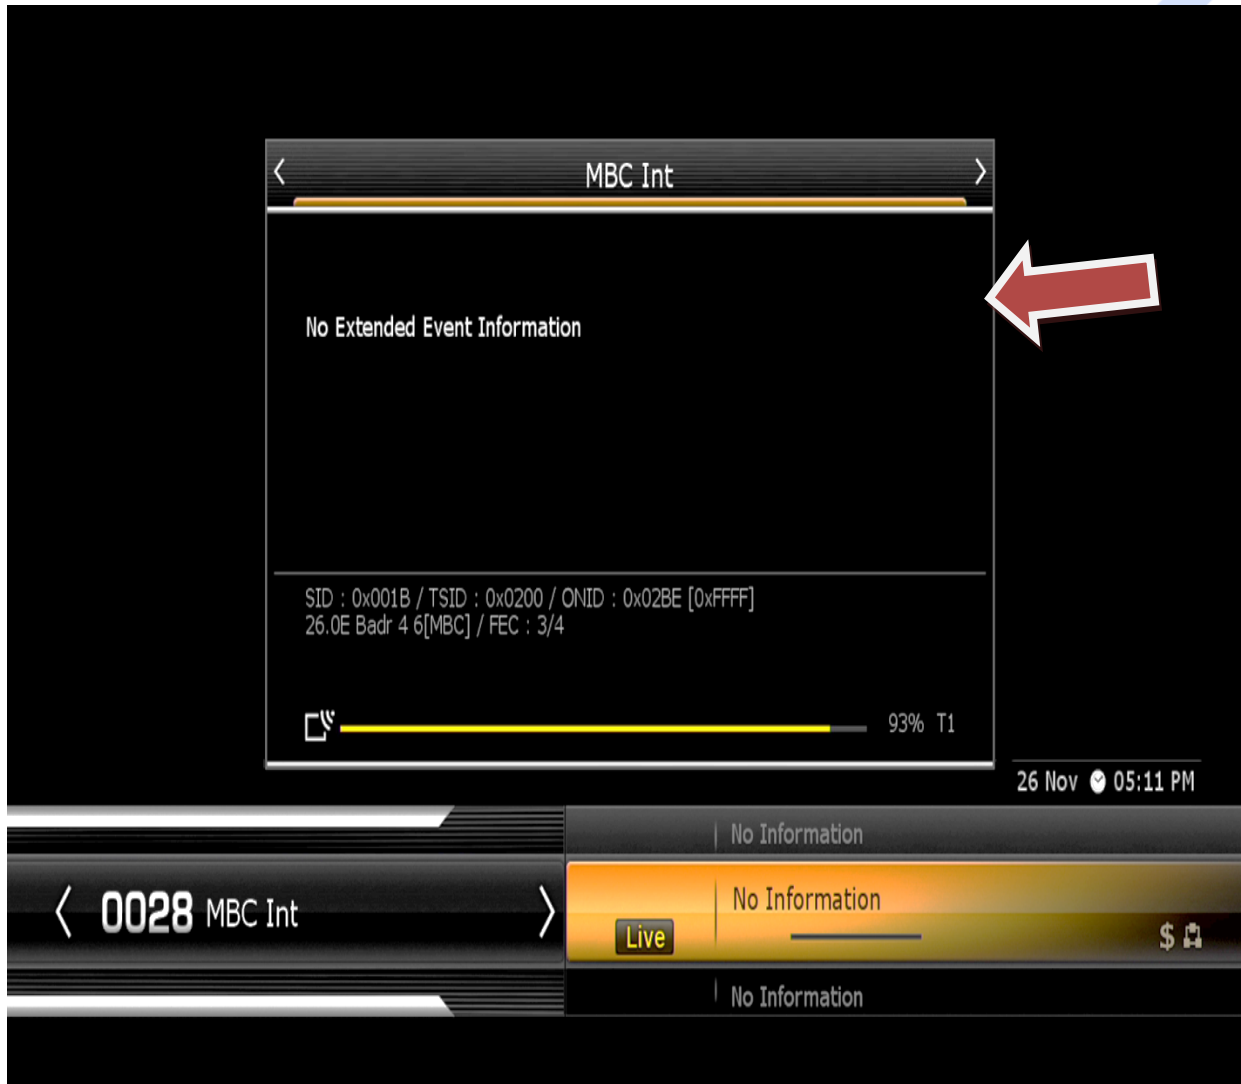

When you press **RED** key it will take you to the COCONUT key Menu there you can insert your 16Bit keys, COCONUT support 16Bits only!!!

Normally CCW is 32Bits "Means 32characters" in all 32bit 16 bits are Active keys and remaining 16Bits are Next Keys so you can try first 16bits if it's not working then you can use the other 16bits

