

## < SKS Activation Procedure for 2 Tuner Receiver >

2010, December 06

<u>Step</u>	<u>Description</u>	<u>Image</u>
<p><u>1</u></p> <p>Connect SKS and Live antenna signal as a picture.</p> <p>(JUPITOR)</p> <p>(VENUS)</p>	<p>Connect SKS and Live antenna signal as a picture.</p> <p>(JUPITOR)</p> <p>(VENUS)</p>	 
<p><u>2</u></p> <p>Enter Menu :</p> <p>Main Menu → System Tools → Up and/or Down key to move “Tuner 2 Setup &amp; Info” menu.</p>	<p>Enter Menu :</p> <p>Main Menu → System Tools → Up and/or Down key to move “Tuner 2 Setup &amp; Info” menu.</p>	




- 3 Press **RED** Key for the “Module Activation”.

And Press **Yes** to confirm.


You can check SKS signal, current service date and the current number of service channel from the indicated SKS “Satellite”.

After completion of “Activation”, you can see “OK” and “Duration (Date of activation and duration)”.

You can change Satellite and Diseqc with Green and Blue key.

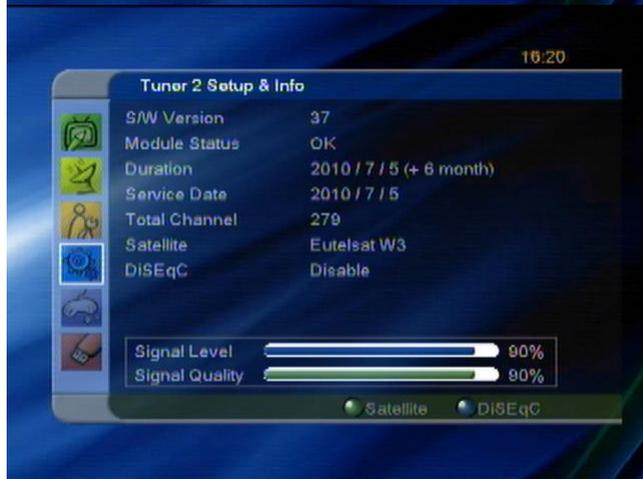

4 After completion of setup, You can check current service status with, “\$” means not serviced and “+ ” means serviced channel.

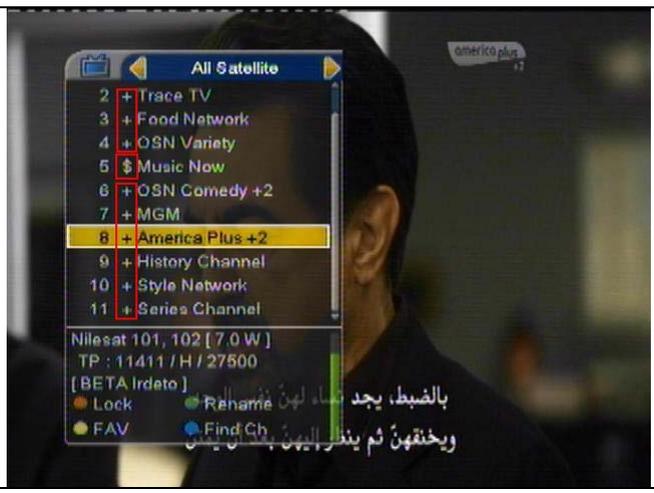

There are signal bar of “Live” and “SKS” signal in the information banner.

